

Mixed Flow In-Line Duct Fan – Instructions

DFA

EN



DISMOUNTING DIAGRAM

Applicable to 100/125 mm

Remove clamp



Applicable to 100/125 mm

Fit clamp



Applicable to

150/160/200/250/315 mm

Remove clamp



Applicable to

150/160/200/250/315 mm

Fit clamp



The uniquely designed support bracket allows the central motor and impeller assembly to be removed without dismantling the ductwork.

EN

EASY TO MOUNT

Fix the support



Connect the ducts



Insert the motor assembly



Make the electrical connections

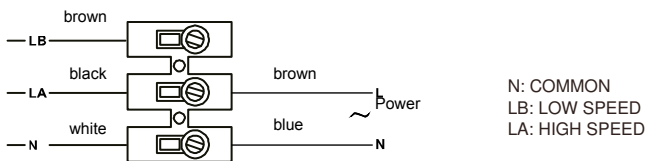


The low profile design of the range makes them the most effective solution for installations where space is restricted, such as ceilings.

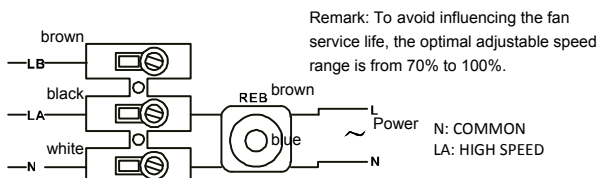
EN

TWO-SPEED WIRING INSTRUCTION

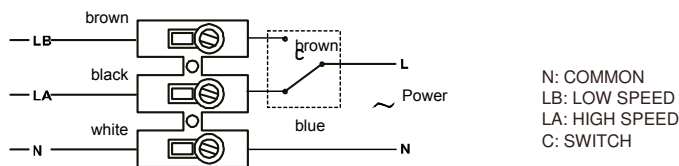
Wiring diagram

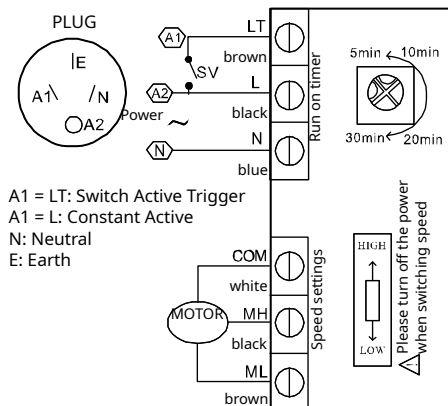
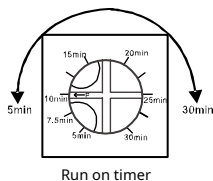
**EN**

Wiring with REB speed control

 


Switch control



WIRING WITH RUN ON TIMER**Run-on timer Instruction****Timer description**

- 1) The run-on time is preset to 10 minutes.
- 2) Can adjust delay-time between 5 min to 30 min.
- 3) Arrow P indicates the selected delay time.

Speed Controller Instruction**Speed settings**

Instruction Manual

Thank you for purchasing our products. It has been manufactured following current technical safety regulations and in compliance with EC standards.

Please read this Instruction carefully before Installing or starting up the product. It contains important information on personal and user safety measures to be followed while installing, using and carrying out maintenance work on the equipment. Once the product has been Installed, please hand in this booklet to the end user.

Check that the apparatus is in perfect condition while unpacking. Any fault or damage caused in origin is covered by our company guarantee. Please make sure that the apparatus coincides with the product you have ordered and that the details on the instructions plate meet your requirements.

Transport and manipulation.

- The packaging used for this apparatus has been designed to support normal transporting conditions. The apparatus must always be transported in its original packaging as not doing so could deform or damage the product.
- The product should be stored in a dry place in its original packaging, protected from dust and dirt until it is installed in its final location. Do not accept delivery if the apparatus is not in its original packaging or shows clear signs of having been manipulated in any way.
- Do not place heavy weights on the packed product and avoid knocking or dropping it.

EN

Important information for the Safety of installers and user.

- Installation must only be carried out by qualified personnel.
- Make sure that the Installation complies with each country's current mechanical and electrical norms.
- Once ready to use, the apparatus must meet the following standards:
 - Low Voltage Directive (LVD) 2014/35/EU
 - Electromagnetic Compatibility (EMC) 2014/30/EU
- Ventilators, or apparatus that include them, have been designed to move the air in the area stipulated on their characteristics plate.
- This apparatus must not be used in explosive or corrosive atmospheres.
- If a ventilator is going to be installed to extract air from premises where a boiler or other combustion apparatus are installed, make sure that the building has sufficient air intakes to assure adequate combustion. The extractor outlet must not be connected to a duct used to exhaust smoke or fumes from any appliance that uses gas or any other type of fuel.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

EN

Safety during Installation.

- Make sure there are no loose elements near the ventilator, as they could run the risk of being sucked up by it. If it is going to be installed in a duct, check that it is clean of any element that could be sucked up by the ventilator.
- When installing an apparatus, make sure that all the fittings are in place and that the structure which supports it is resistant enough to bear its weight at full functioning power.
- Before manipulating the apparatus, make sure the mains supply is disconnected, even if the machine is switched off.
- Check that the mains supply voltage and frequency values coincide with the stipulations on the characteristics plate.
- The electrical installation must include a double pole switch with a contact clearance of at least 3 mm, correctly sized and in accordance with the electrical standards of the country of installation.
- Please follow the connections diagram for the electrical connections.
- If an earth connection is necessary, check that it is correctly connected and that adequate thermal and overloading protection has been connected and adjusted to the corresponding limits.
- If a ventilator is installed in a duct, the duct must be exclusively for the ventilation system.

EN

Starting up.

Before starting up the machine, make sure that:

- The apparatus is well secured and the electrical connections have been carried out correctly.
- The safety devices have been adequately connected.
- no loose material or leftover fittings remain that could be sucked in by the ventilator, if the ventilator has been mounted in a duct, make sure it is clear of loose material.
- The earth fittings are adequately connected.
- The electrical safety devices are correctly connected, adjusted and ready for use.
- The wire and electrical connections inputs are correctly sealed and water-tight.

When starting up the machine, make sure that:

- The impeller turns in the correct direction.
- There are no abnormal vibrations.
- If any of the electrical safety devices blow, the apparatus must be quickly disconnected from the mains supply. The whole installation should be carefully checked before trying to start up the machine again.

Maintenance.

- Before manipulating the ventilator, make sure it is disconnected from the mains supply even if it has previously been switched off. Prevent the possibility of anyone else connecting it while it is being manipulated.

- The apparatus must be regularly inspected. These inspections should be carried out bearing in mind the machine's working conditions, in order to avoid dirt or dust accumulating on the impeller, turbine, motor or grids. This could be dangerous and perceptibly shorten the working life of the ventilator unit.
- While cleaning, great care should be taken not to destabilise the impeller or turbine.
- All maintenance and repair work should be carried out in strict compliance with each country's current safety regulations.

EN

NOTE: THE PRODUCER RESERVES THE RIGHT TO CHANGE THE SPECIFICATIONS WITHOUT NOTICE.



Pursuant to European Directive 2012/19/EU and the Act on waste electrical and electronic equipment, this device upon its decommissioning should not be disposed of together with other household waste. The user is required to deliver the device to the electrical and electronic equipment recycling collection centre.

